



Quick Start Guide

How to Setup eCADSTAR on you PC

System Requirements

Please check your PC matches the system requirements.

1. **Supported Operating Systems** :- can be identified by clicking 'Supported Operating Systems' on the System Requirements page in ZGS.
2. **Hardware Requirements** :- can be viewed by clicking 'Windows 10/Windows 8.1/Windows 7 Hardware Requirements' on the System Requirements page in ZGS.

<https://support.zuken.com/global/products/Index/system-info>

Licensing

There are two available licensing methods for eCADSTAR. Depending on the license type, different steps may need to be taken.

1. **Network License** :- If you are using network licensing, you need to follow the instructions in the Network Licensing Guide. This is available from the eCADSTAR Product Download page alongside the software install.
2. **Node Locked License** :- If using a software Key (dongle) you will need to install the Sentinel driver. The driver installation file is available from the eCADSTAR Product Download page alongside the software install.



File List

No.	Title	Type	Size	Release date	
1	eCADSTAR 2022.0.1 Software	EXE	417.97 MB	23-Jun-2022	Download
2	eCADSTAR Quick Start Guide	PDF	1.33 MB	23-Jun-2022	Download
3	Sentinel Driver 7.6.9	EXE	7.36 MB	23-Jun-2022	Download
4	Network License Server	EXE	9.67 MB	23-Jun-2022	Download
5	Network Licensing Guide	PDF	4.94 MB	23-Jun-2022	Download
6	Windows Installer Service guide	PDF	979.37 KB	23-Jun-2022	Download


https://support.zuken.com/global/downloads/Index/detail?prd_id=100&dl_no=100-102911

Quick Start Guide for Installation on PC

1. Download and run the eCADSTAR Software installation file and follow the prompts in the installation wizard. This can be launched from the Zuken Global Support page (eCADSTAR Downloads). The download link is shown in the Licensing images (no.3).
2. You may be asked for permission to install eCADSTAR onto your computer
3. Choose either **Node Locked only** or **Network Licensed and/or Node Locked**. For **Network Licensed** you should enter the License Server Host Name and Host Port Number.

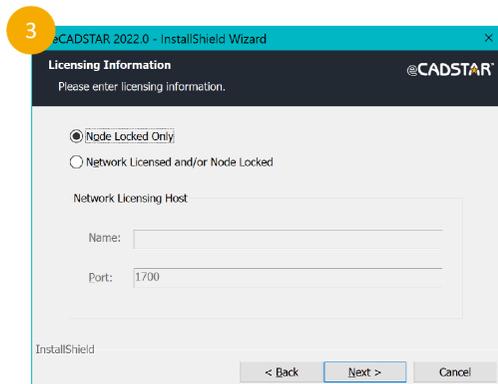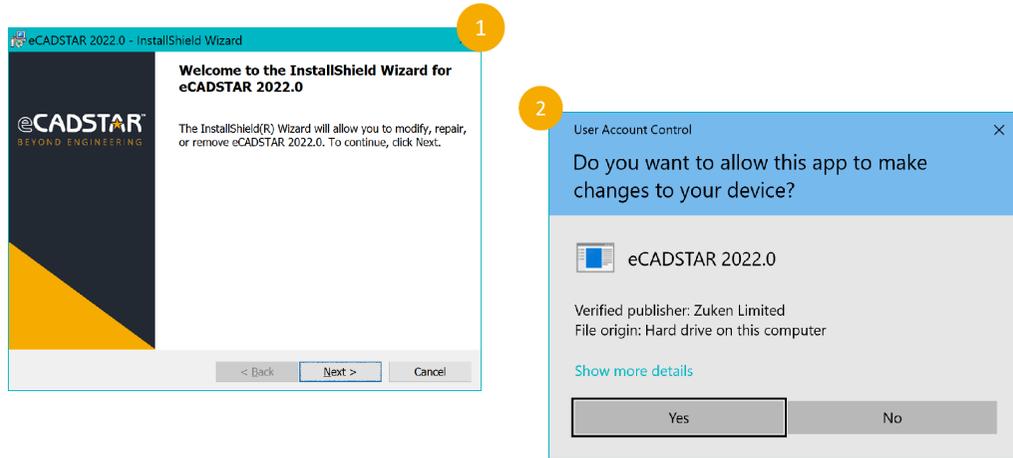

1. **Network License** :- Point to the location of the license server by entering the Host Name and Host Port Number within the **Product Settings** dialog, accessible via the **File > Configuration > Product Settings...** menu in any of the eCADSTAR applications.

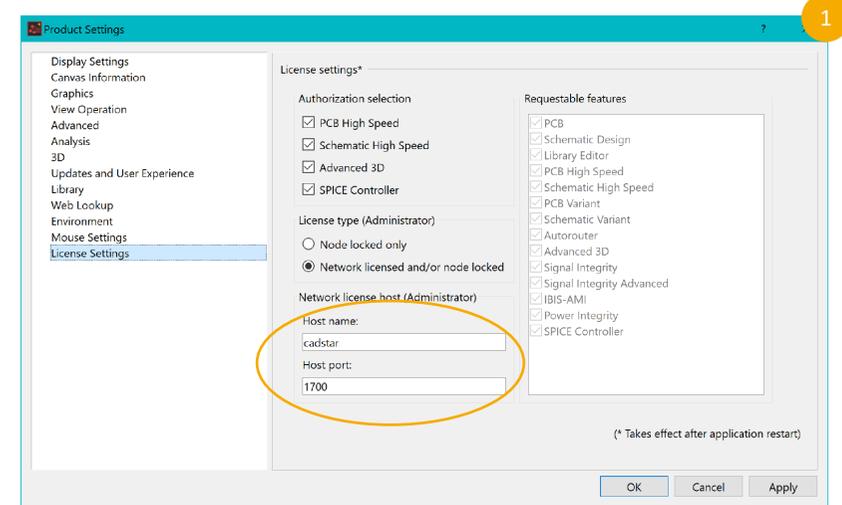

2. **Node Locked License** :- After installation is complete, place the **license.dat** file you have received from your reseller in the **bin** directory of your eCADSTAR installation. You may require administration rights to perform this operation.

